

# Zilla ANALOG POWER CENTER

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS

### WARNING

1. Never connect the Power Center to power outlet while hands are wet.
2. Cut off power and discontinue use if the unit was submersed or dampened by water.
3. Always leave a drip-loop (see below) in the power cord connected to the Power Center to prevent water from running down the length of the cord and reaching the power outlet.

### CAUTION

1. Designed for indoor use only. Do not install or store the unit where it will be exposed to the weather.
2. This device should not be installed in wet or damp areas. Keep unit dry.
3. For added safety, this device should be plugged into a grounded three-prong receptacle controlled by a GFI (Ground Fault Interrupter) circuit breaker.

### PRODUCT SPECIFICATION

15 amp 120 volt 60 Hz (1875 watt max.) circuit breaker

### SAFETY FEATURE

Rotating round locking cover.

## LIRE ET SUIVRE TOUTES LES DIRECTIVES SUR LA SÉCURITÉ

### AVERTISSEMENT

1. Ne jamais brancher le centre d'énergie à une prise de courant tandis que vos mains sont mouillées.
2. Couper le courant et se débarrasser de l'unité si elle a été submergée ou mouillée dans l'eau.
3. Toujours laisser une boucle d'égouttement dans le câble d'alimentation branché au centre d'énergie afin d'éviter que de l'eau coule le long du câble et atteigne la prise de courant.

### ATTENTION

1. Destiné à un usage intérieur seulement. Ne pas installer ou remiser l'unité où elle sera exposée aux intempéries.
2. Ce dispositif ne doit pas être installé dans des zones mouillées ou humides. Maintenir l'unité sèche.
3. Pour plus de sécurité, ce dispositif doit être branché dans une prise de courant à trois fiches avec mise à la terre contrôlée par un disjoncteur de fuite de terre.

 
 
### SPÉCIFICATIONS DU PRODUIT

Disjoncteur de 15 ampères 120 volts 60 Hz (1875 watts max.)

### FONCTION DE SÉCURITÉ

Prise ronde rotative de verrouillage

## TIMER DIAGRAM

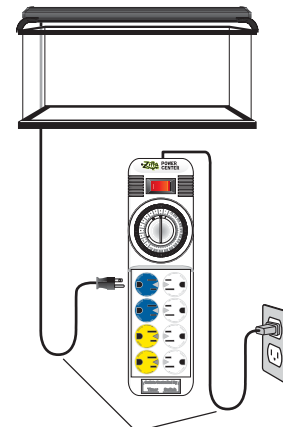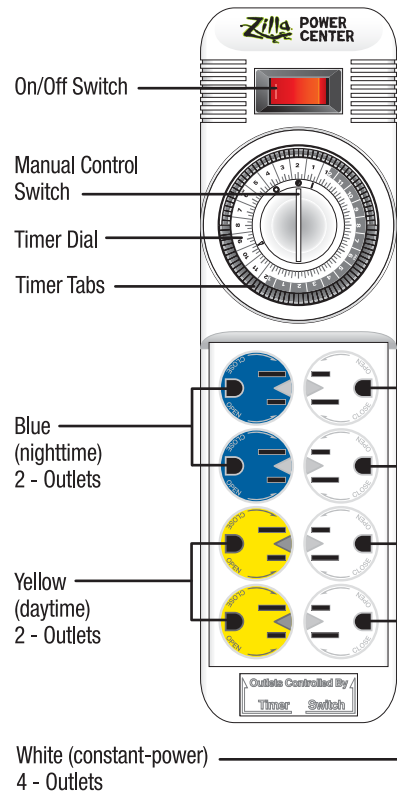

Drip Loops  
Boucles d'égouttement




# Zilla ANALOG POWER CENTER
 
## INSTRUCTIONS

Push up timer tabs (located at the edges of the timer dial) toward center of dial to turn yellow outlets on and blue outlets off. Push timer tabs down to turn blue outlets on and yellow outlets off. Each timer tab represents a 15 minute interval. The white outlets provide constant power controlled by the on/off switch. The on/off switch controls power to all outlets and the timer.

## SETTING THE CLOCK




Set current time of day by turning timer dial clockwise until correct time faces arrowhead ◀.

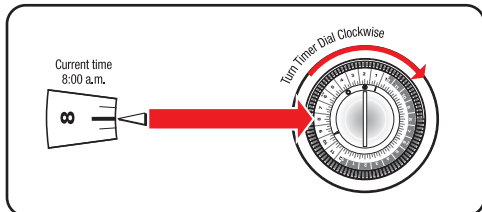

## SETTING THE DAY-NIGHT TIMER

1. Turn manual control switch to timer-on ☉ position. Be sure that clock is set to current time of day.
2. Select time of day you want daytime lights turned on and push timer tabs up to turn on yellow outlets for daytime applications.
3. Make sure timer tabs are up until you reach time of day when you want daytime lights turned off.
4. Nighttime timer is set by pushing timer tabs down to turn on blue outlets.

   **NOTE:** Blue and yellow outlets alternate power; both outlets cannot be on at the same time (i.e. when nighttime blue outlets are on, the daytime yellow outlets are off).

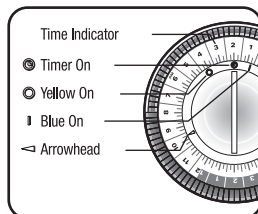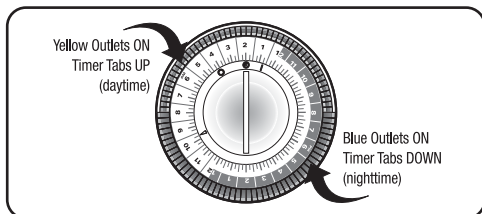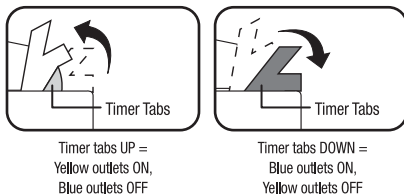

## MANUAL CONTROL

Bypass timer by using manual control switch. To activate yellow daytime outlets continuously, turn switch to yellow-on ☉ position.

To activate blue nighttime outlets continuously, turn switch to blue-on ⬇️ position.

## POWER CENTER INSTALLATION

1. Once time cycles are set, plug the light fixture power cords into the Power Center.
2. Turn on the Power Center On/Off switch.

## 12 MONTH LIMITED WARRANTY

### WHAT THE WARRANTY COVERS:

Central Aquatics (Company) warrants this product (see Exclusions below) to the original purchaser against defective material and workmanship that occurs during normal use for 12 months from the date of original purchase. Company will, at Company's option, either repair or replace same without charge (but no cash refunds will be made).

### EXCLUSIONS:

1. Damage resulting from accident, misuse, abuse, lack of reasonable care, subjecting the product to any but the specified electrical service, other than normal and ordinary use of the product, subjecting the product to abnormal working conditions or any other failure not resulting from defects in materials or workmanship.
2. Damage resulting from modification, tampering with or attempted repair by anyone other than the Company.
3. Transfer of product to someone other than the original consumer purchaser.

### FOR WARRANTY OR TECHNICAL SERVICE:

1. Contact the Company by mail or telephone:  
Central Aquatics, 5401 West Oakwood Park Drive, Franklin, WI 53132.  
Telephone: (888) 255-4527 to obtain a return authorization number.

**NOTE:** Be sure to provide contact information when requesting return authorization number.

2. Deliver, mail or ship the product, together with a copy of the original bill of sale, to:  
Central Aquatics  
5401 West Oakwood Park Drive  
Franklin, WI 53132

You must pay any postage, shipping charges, insurance costs and other expenses to return the product to Central Aquatics, Franklin, WI 53132. However, if the necessary repairs are covered by the warranty, Company will pay the return shipping charges to any destination within the United States or Canada.

### LIMITATION OF IMPLIED WARRANTIES AND EXCLUSION OF CERTAIN DAMAGES:

THE COMPANY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, WITH RESPECT TO THIS PRODUCT. THIS WRITING CONSTITUTES THE ENTIRE AGREEMENT OF THE PARTIES WITH RESPECT TO THE SUBJECT MATTER HEREOF; NO WAIVER OR AMENDMENT SHALL BE VALID UNLESS IN WRITING SIGNED BY THE COMPANY. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation or exclusion may not apply to you.